

Adapters

QFP48

Target CPU package: QFP48
 Body size: 7mm x 7mm
 Pitch: 0.5 mm
 POD target layout: T_QFP48A

Can be used with:

 
- 78K0R/Fx3 ActiveGT POD
- R8C/3x ActivePRO POD
- 68HC08GR POD
- 68HC08GR Active POD
- 78K0/Kx2 ActivePRO POD

This adapter is used when listed PODs emulate target CPU in the QFP48 package.

Described adapter parts can be used only with listed PODs. Disregarding this warning may result in hardware failure of the target and the emulation system.

► Available Adapter Parts (by ordering code):


- **IA48TQ-SOLDER**

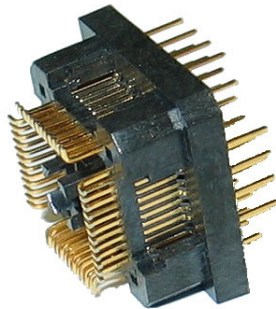


Solder part, which is soldered down to the target.

Recommended PCB footprint size (by TET):

(Unit : mm)		
C Size	D Size	E Size
10	10	1.75

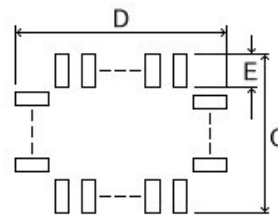 

- **IA48TQA-WIRE**

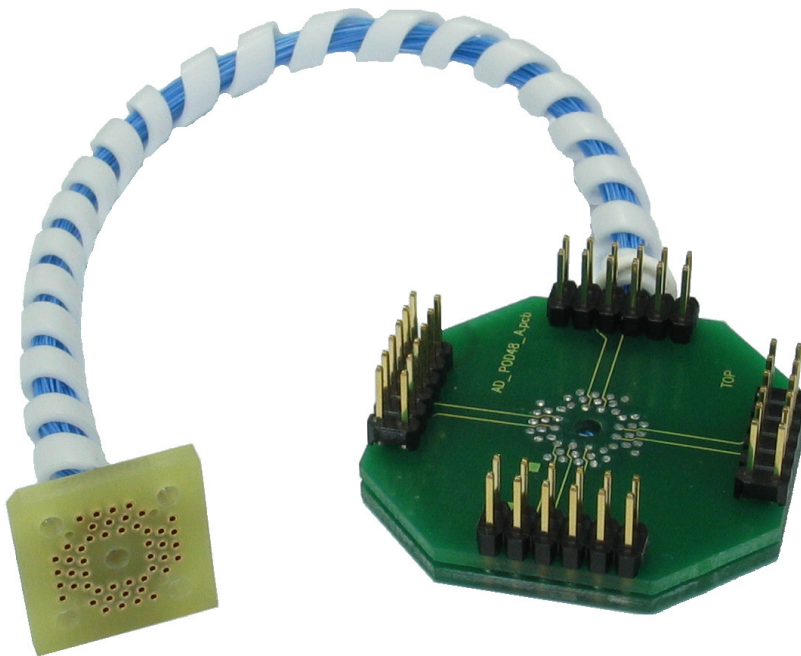 

IA48TQA-WIRE represents flexible connection between the POD and the target.

► Assembly

While assembling the adapter and connecting the POD to the target, pay attention to pin 1 to prevent any damages of the hardware, which may result from incorrect assembly.

1. First, connect IA48TQA-WIRE to the POD.
2. Next, solder down the IA48TQ-SOLDER to the target PCB
3. Finally, connect the POD to the soldered IA48TQ-SOLDER.

Disclaimer: iSYSTEM assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information herein.

© iSYSTEM. All rights reserved.